

DETERG'ANIOS

Floors and surfaces
Detergent



- Neutral pH detergent
- Wide compatibility with any kind of material and surface
- No rinsing required
- Does not leave traces
- Compatible alternately with any ANIOS disinfectant
- Leave a pleasant scent

INDICATIONS

Cleaning of floors, surfaces and equipment in a hospital environment.
Cleaning product which wets, disperses and dissolves organic and mineral stains.

CHARACTERISTICS

- Green coloured solution
- pH of straight product : approx. 10.9
- pH of diluted product (0.25%) : approx. 7.9
- Density at 20°C : approx. 1.02
- Non corrosive (absence of oxidizing agents)

**PRODUCT
TO BE DILUTED**
i.e. 20 ml → 8 L




0,25%


DETERG'ANIOS

Floors and surfaces Detergent


INSTRUCTIONS FOR USE

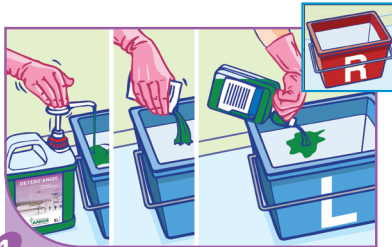

1 Fill a bucket with 8 liters of water.
0,25% dilution : pour a 20ml dose of DETERG'ANIOS in the washing bucket.

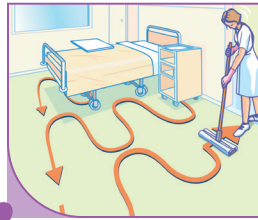

2 Proceed to cleaning respecting the draw : from the back to the exit. No rinsing of surfaces required.

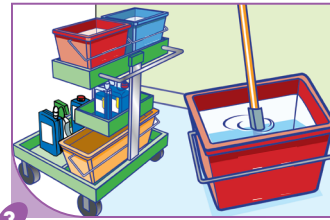

3 Rinse and wring the mop before soaking it in the washing bucket. The cleaning trolley must be placed in the hallway, not in the room.



4 Replace the mop head after cleaning each area and change the washing and rinsing solutions. Place the dirty mop head in the container provided.

COMPOSITION

Non-ionic and anionic detergents, chelating agent, bacteriostatic and fungistatic agents, colouring and citrus fragrance.

PRECAUTIONS FOR USE

Dangerous – respect the precautions for use (Drawn up according to the European rules in force regarding the classification and labelling of chemical products). Store between +5°C and +35°C.

PACKAGING

- 1 500 bags of 20 ml each.....Ref. 0365.129
- 2 12 bottles 1L measure.....Ref. 0365.092
- 3 4 drums of 5L each with a 20ml pump.....Ref. 0365.036

